









Spareparts

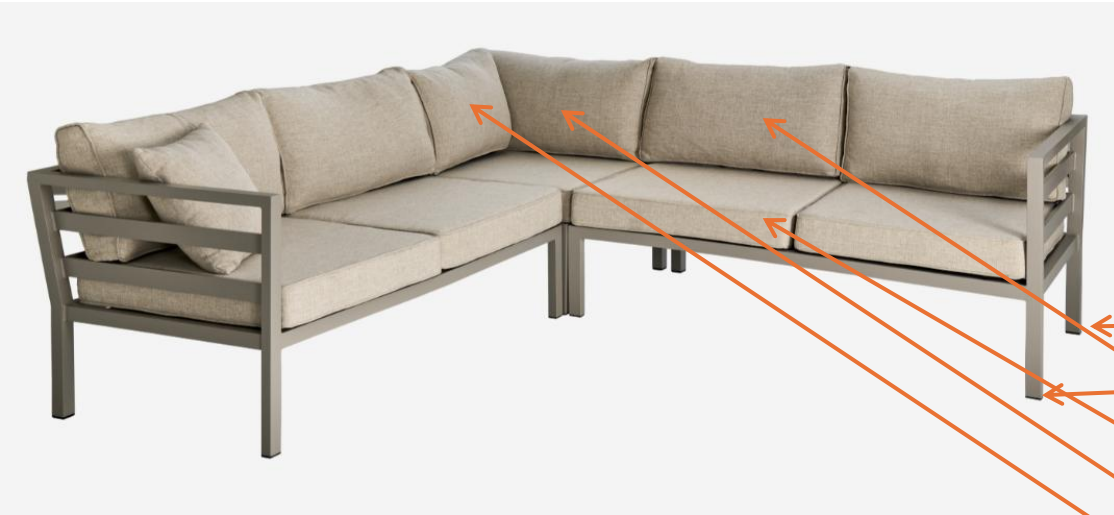

- 10-4365HVH-21-40 Connector Weldon (part "E" plastic)
- 10-4365-40 Connector Weldon (part "F" metal)
- 10-4365-80-10 Foot Weldon back
- 10-4365-80-11 Foot Weldon front black
- 12-4361-42 Back cushion Weldon universal
- 12-4361-41 Seat cushion Weldon universal
- 12-4365-42 Back cush Weldon corner long
- 12-4365-43 Back cush Weldon corner short
- 315-02 Cover Weldon corner 1+2 beige
- 311-02 Cover Weldon universal 1+1 beige

| | | |
|---|--|---|
| A |  | 1 |
| B |  | 1 |
| C |  | 1 |
| D |  | 1 |
| E |  Without middle sofa need to purchase separately | 6 |
| F |  | 1 |

(Plan 1)

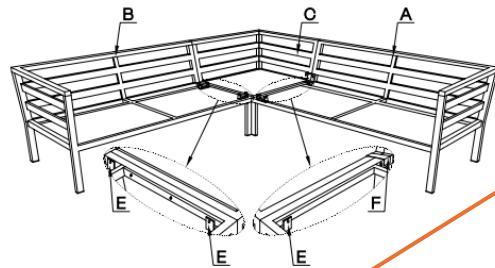

Weldon
4365HVH-21-02
4361-21-02
4144-21-02
4367-21-02