


Brafab











Assembly instruction


Vinovo Parasol

Safe and secure use


Article number: 8897-73-71/ 8897-71-21/
8898-73-71/ 8898-71-21/ 8898-73-2/
8898-73-27/ 8899-73-71/ 8899-71-21

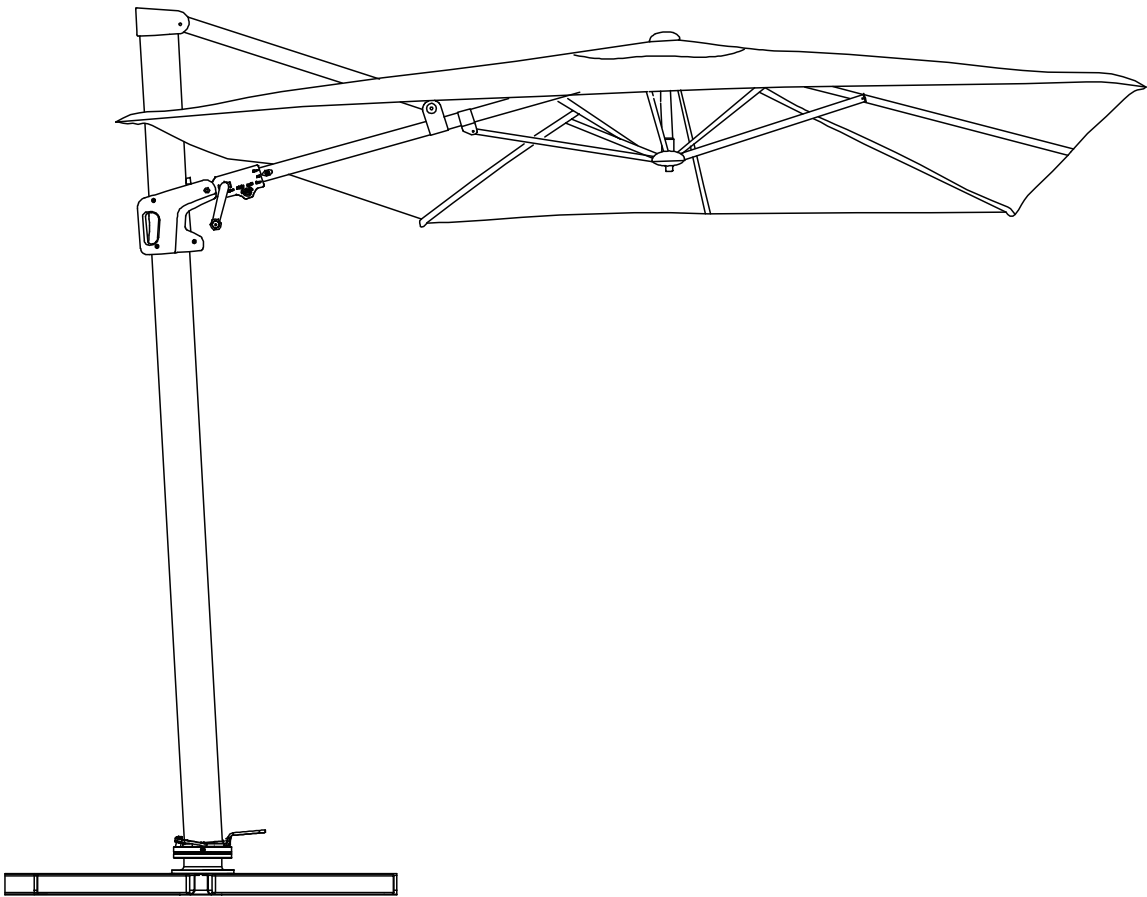


A	Parasol		1PC
B	Cross Base 1		1PC
C	Cross Base 2		1PC
D	Rotating Base		1PC
E	Bolt	 M8*20MM	2PCS
F	Washer		6PCS
G	6# Wrench		1PC
H	Crank Handle		1PC
I	Bolt	 M10*20MM	4PCS
J	Wrench		1PC

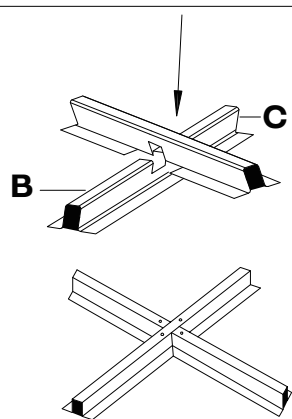


1. Assemble the cross base 1&2(B&C) on a horizontal position.

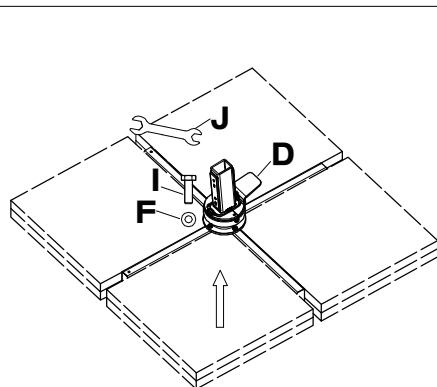


2. Assemble the rotating base(D) on the cross base and use the wrench(J) to screw the bolts(I) and washers(F).

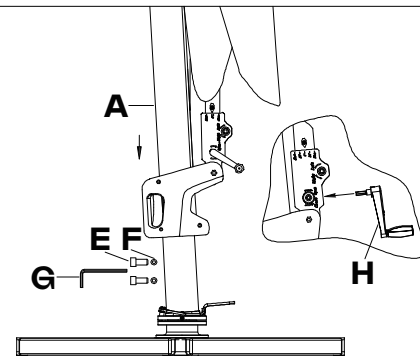


3. Put the parasol (A) on the base and align the holes, then use the 6# wrench (G) to screw the bolts(E) and washers(F). **ATTENTION:**Make sure the parasol always straight during the assembling process.

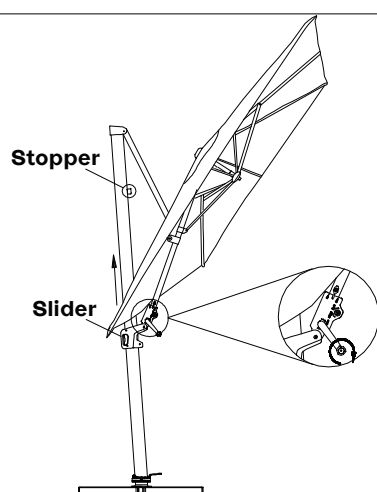


4. Push the button on the slider and boost the slider to the middle position, open the parasol completely by clockwise operating the crank, then boost the slider to the stopper.

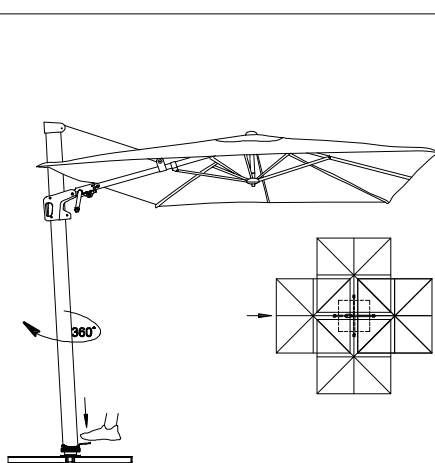

5. Press the rotating base pedal, the parasol could rotate 360°.

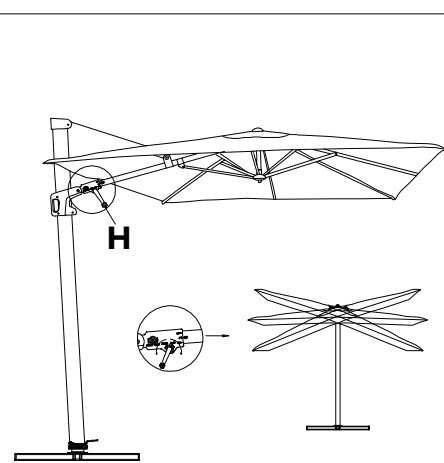

6. Assemble the crank handle to the hole, operating the handle can make the cover turn on the right or left.

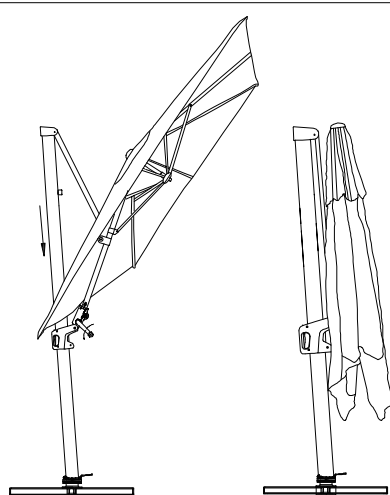

7. Push the slider button and pull it down to the middle position, then operating the crank counterclockwise. After the parasol closing, pull the slider down to the bottom position.